


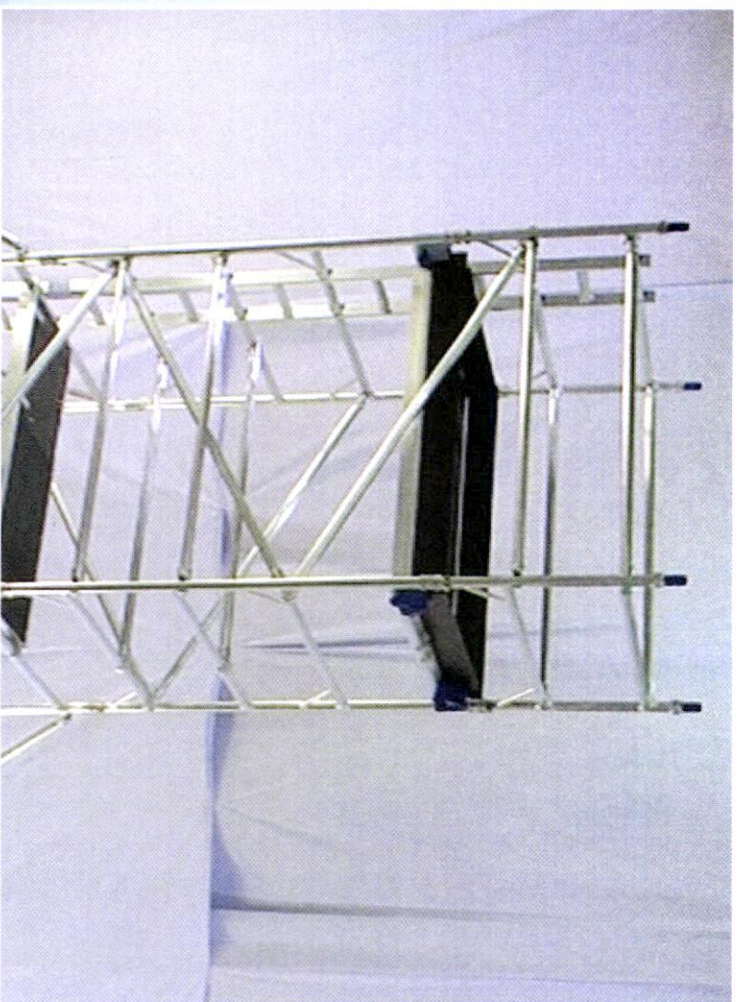

16. Finally slide platforms together & fit toe-boards in accordance with the manufacturer's instructions.

Aluguard Telescopic Selection Chart

Red Brace	1.5m-1.8m	Min 970mm	-	Max 1690mm
Green Brace	1.8m-2.0m	Min 1170mm	-	Max 2090mm
Blue Brace	2.0m-2.5m	Min 1470mm	-	Max 2690mm
Yellow Brace	2.5m-2.7m	Min 1550mm	-	Max 2850mm
Black Brace	2.7m-2.9m	Min 1770mm	-	Max 3290mm
White Brace	2.5m-3.1m	Min 1070mm	-	Max 3690mm

safety...

Always refer to the Tower Manufacturers Guidance Notes for the safe application of the tower.

maintenance...

The Aluguard does not require any specific maintenance programme, but inspection prior to use is recommended to ensure all items are in full working order.

For further technical advice - please refer to your supplier.




user guide for double width aluminium towers

Aluguard has been designed for use with the most current aluminium tower systems and does not interfere with the manufacturers recommended bracing layout, which must always be adhered to. Aluguard removes the need to use the 3T system and provides a safe guarded working position at all times in compliance with The Work at Height Regulations 2005.

The Aluguard can be used to erect all heights of tower without needing to start with 1m high frames.

Consult your manufacturers Erection Guide for the appropriate list of components.

Aluguard Frame

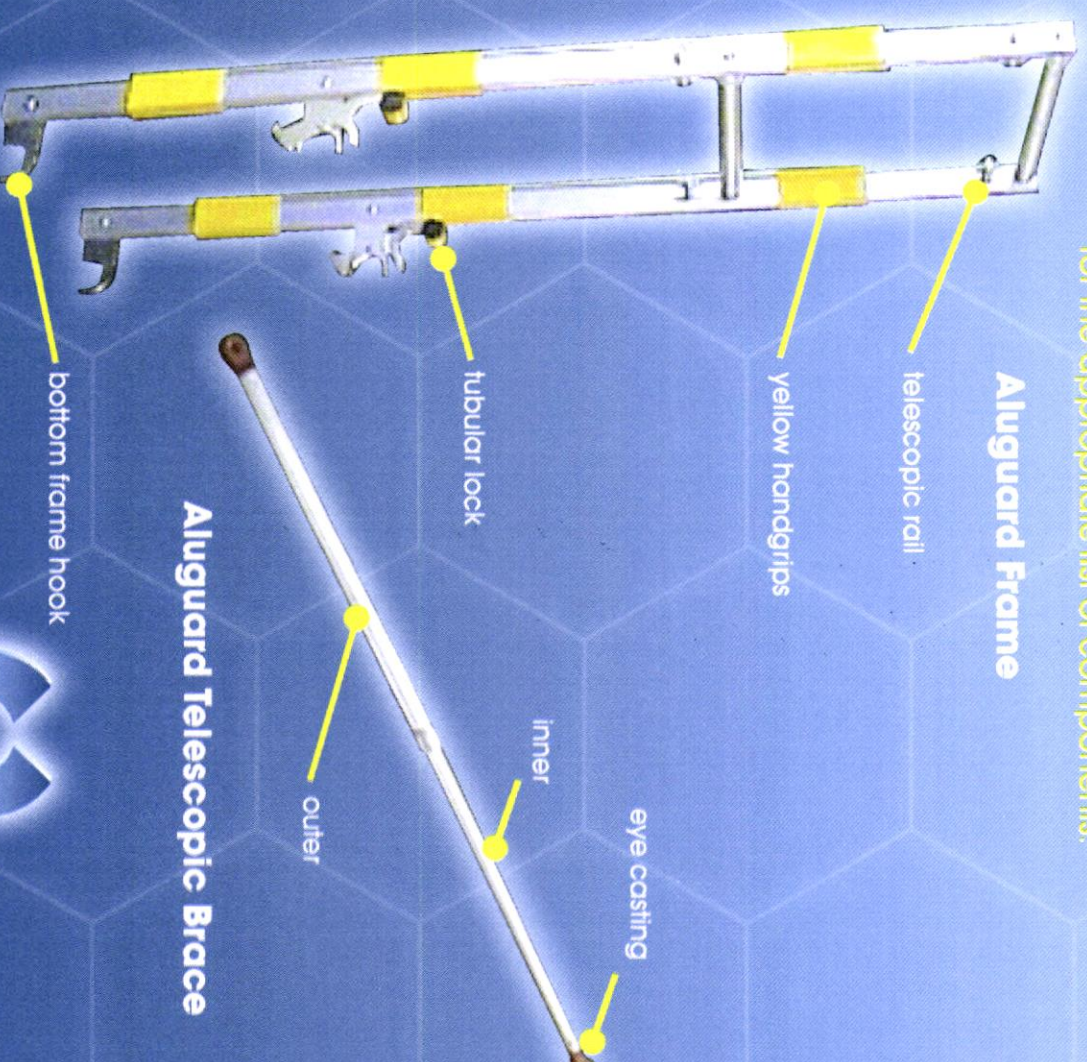


Aluguard Telescopic Brace

ITEM NO : 2000.032

asure
sure.com

asure

www.asure.com

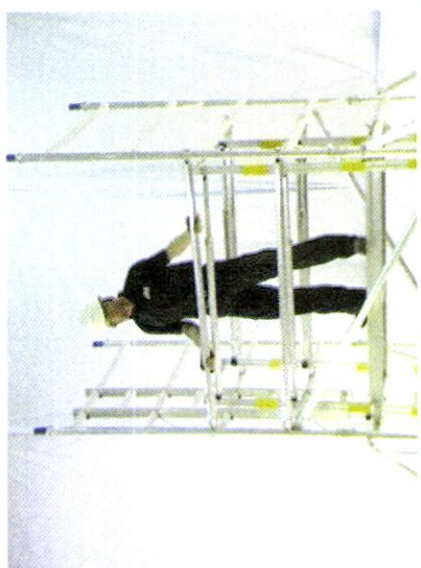

10. Fit horizontal guardrails to top outside
Guardrail may need to be located on Frame
Vertical...




12. Move Aluguard to final position...




14. Fit bracing and guardrails to top platform
level in accordance with manufacturers
instructions...



16. Aluguard frame can be either connected to
the outside of the lower frame or removed...

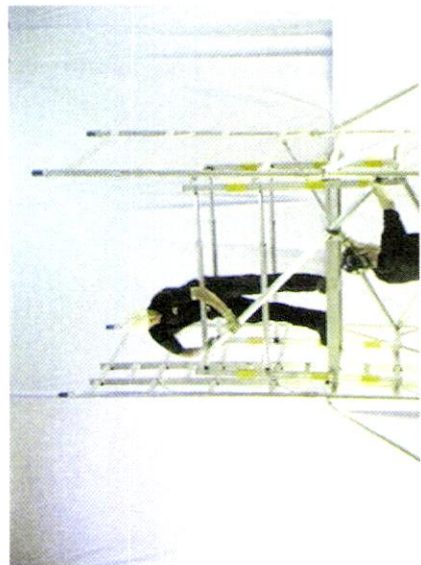

9. Fit diagonal braces in accordance with
manufacturers instructions. Continue building tower
until final platform height has been reached...

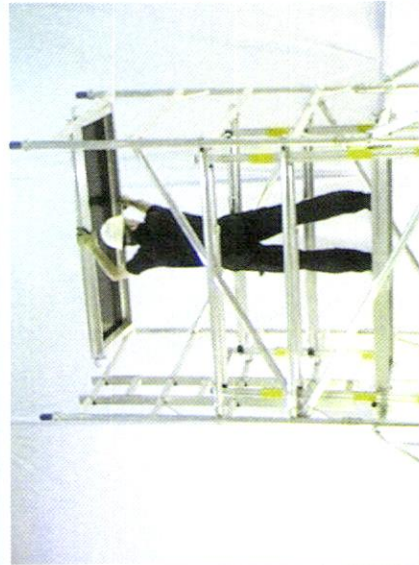


11. Place main platform in final working position...



13. Fit trap platform...




15. Remove Aluguard...

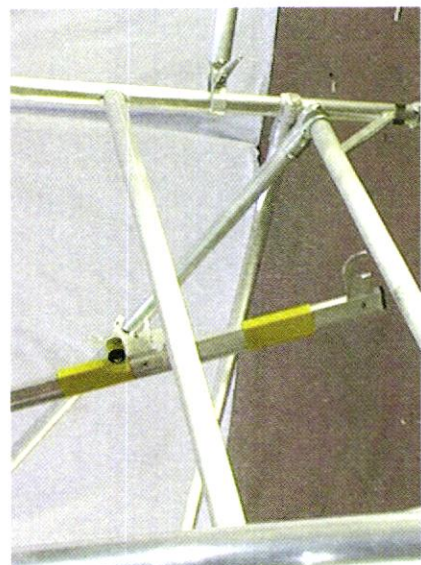


2. Locate Bottom Frame Hook onto appropriate
frame rung...



4. Connect Aluguard Brace end onto Anti-Luce
fitting...

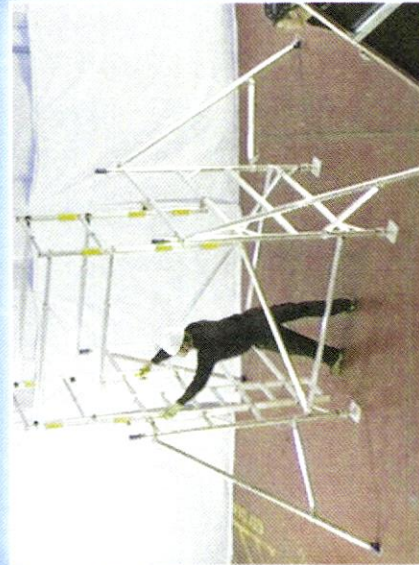


6. 2nd position of Aluguard...

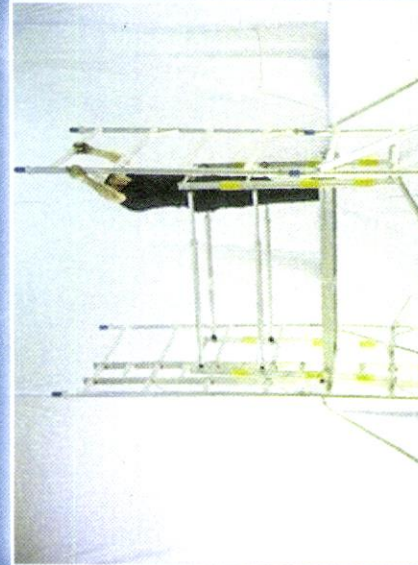


8. Fit next pair of lower frames...




1. Unlock & open Aluguard Frame & re-lock...

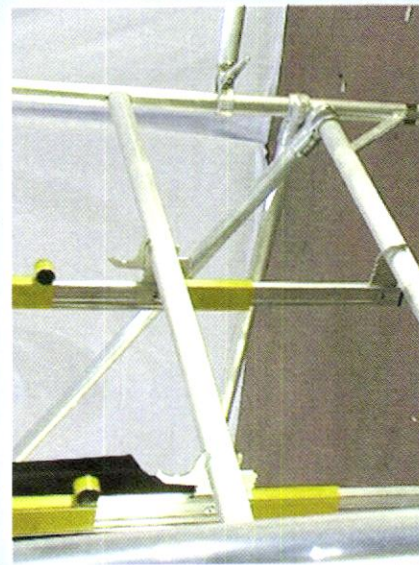

3. Connect tubular Hook by sliding up &
Releasing yellow grips...

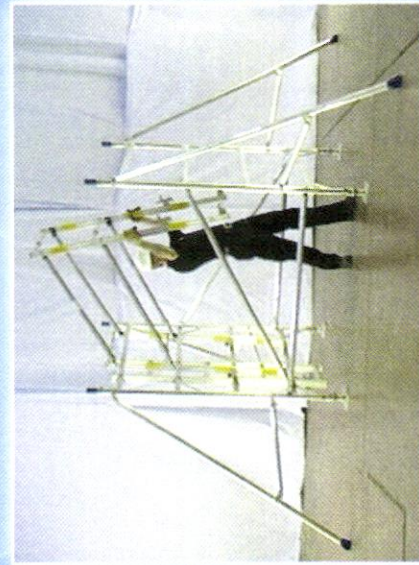

5. Move Aluguard Frames up one at a time...

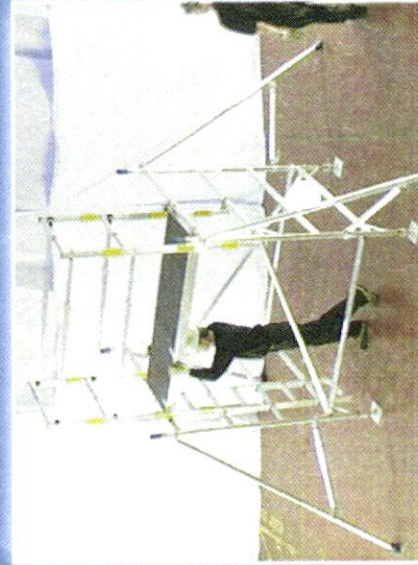

7. Fit Trap Platform in between Aluguard Frame...